

Persons Assembly


50 MIN

Approximate Assembly Time bensons for beds

2 DOOR +2 DRAWER HIP HOP WARDROBE WHITE

STK268005

Assembly instructions Please keep these instructions for future reference.

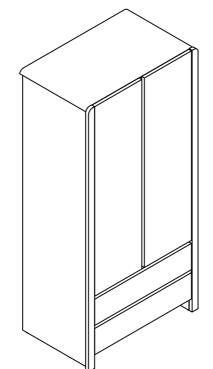

Regrettably self-assembly items cannot be returned once assembly is part or fully completed unless the items are found to be faulty. Should you need to return the unassembled product, please repack in its original packaging.

Important information


- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- Carefully check that you have all the parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from construction area.
- We suggest you retain these instructions for future reference.
- In the unusual event of an issue with your product would you please quote the batch I.D. number situated on the main parts of the frame.


Product information


- Product finished Painted White finish.
- 2 Door & 2 Drawer.
- Conforms to BS EN14749 & BS4875-7 Standard


Care instructions


- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the color.
- Periodically check & re-tighten any fastener.
- Periodically dust lightly with a clean soft cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS
- THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS

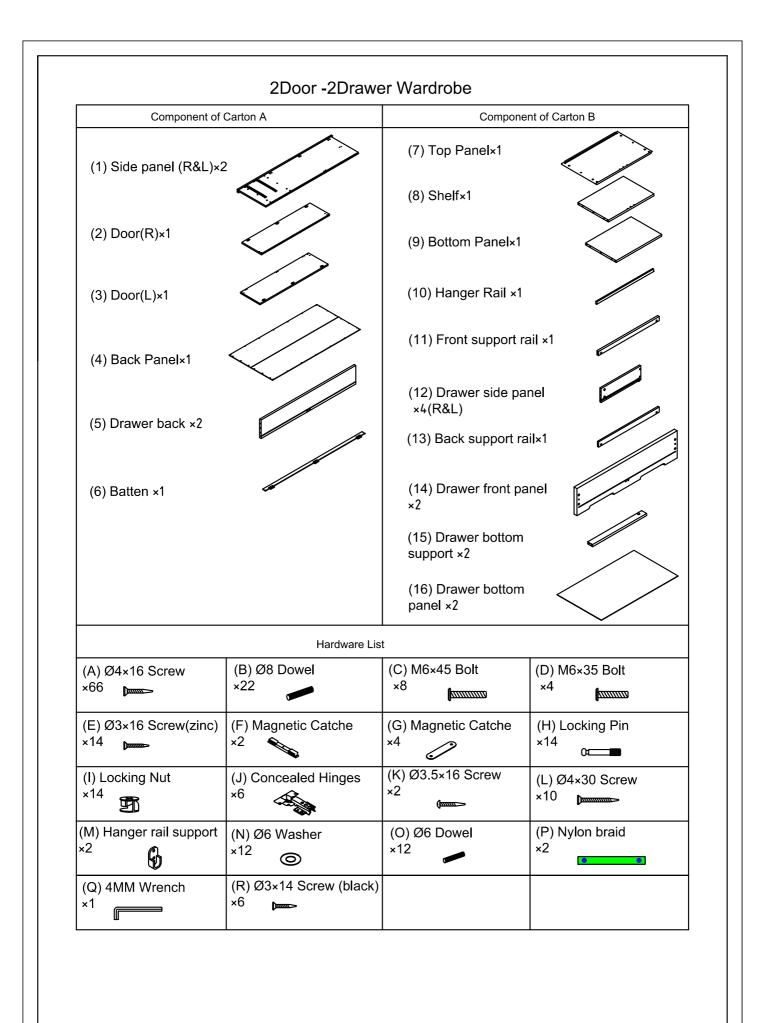

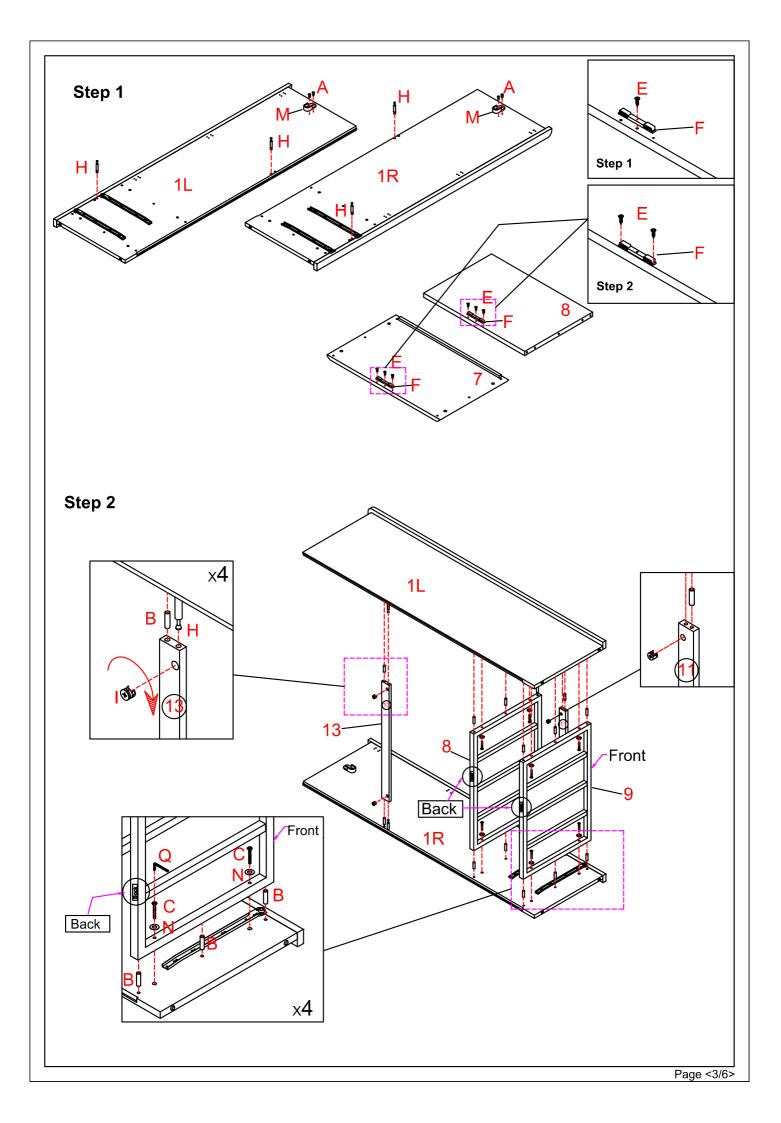

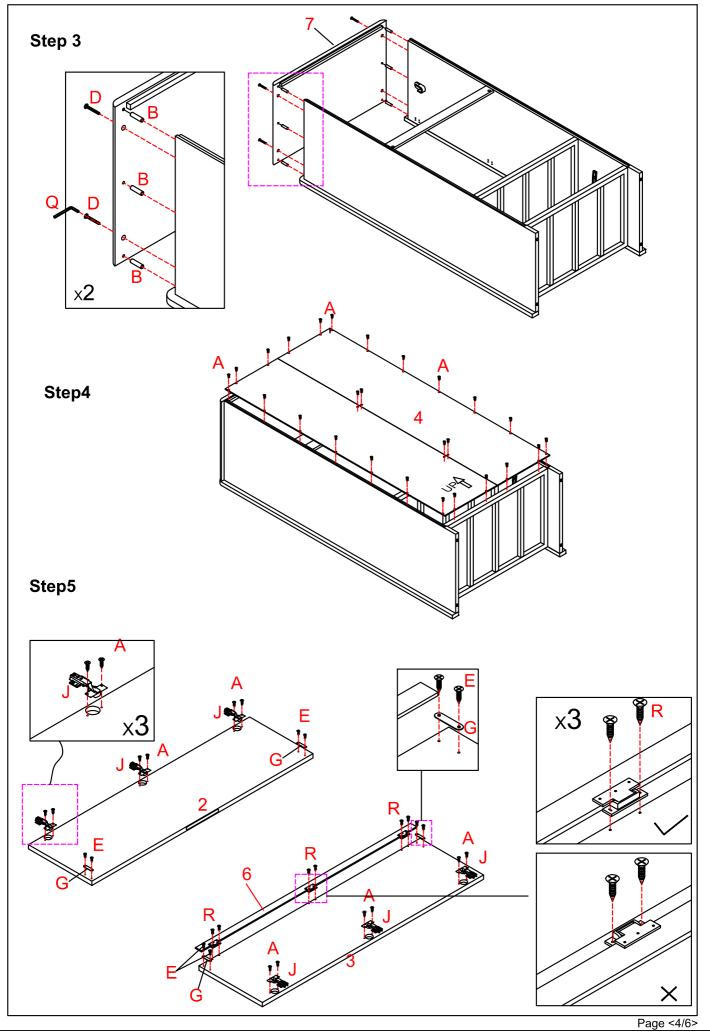

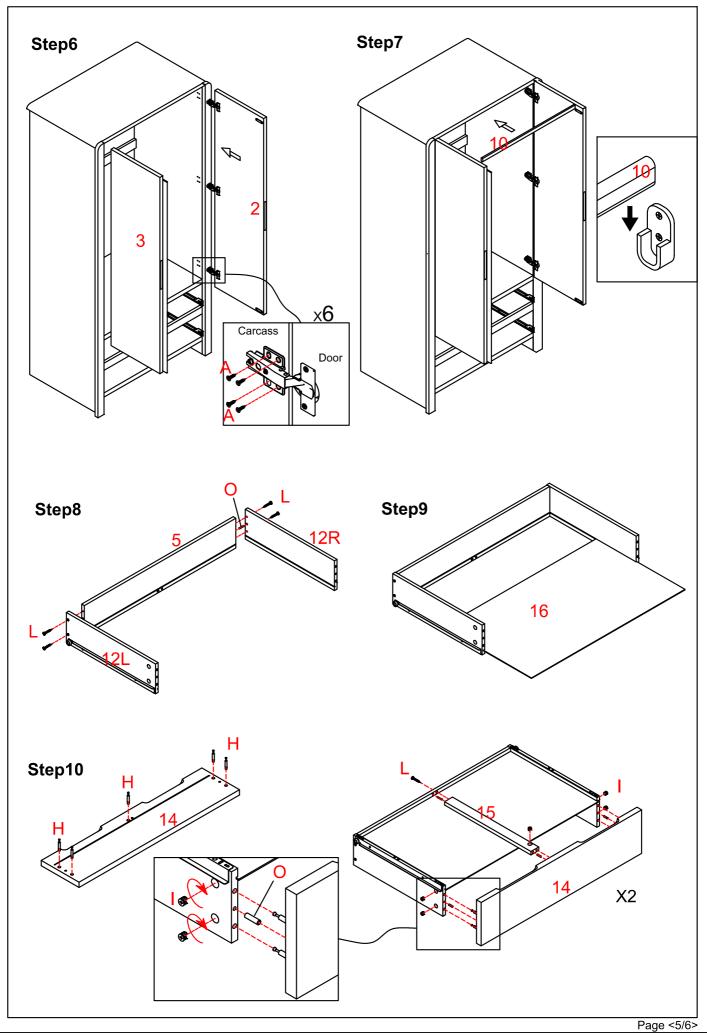

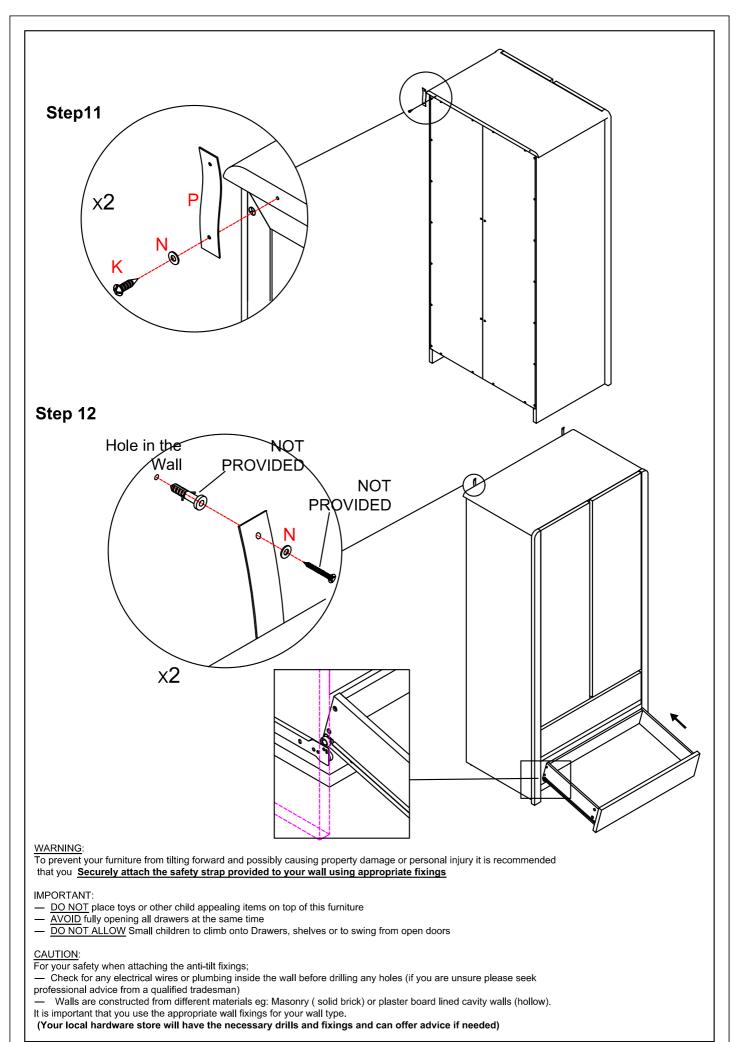


Assembly Instructions

Hinge Adjustment

Lateral Movement




What it looks like - The door will not be flush with the side panel.

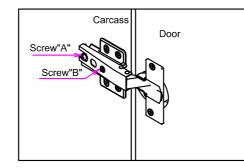


How to fix it

- To move the door towards the centre of the unit, loosen Screw "A". Adjust the door and then tighten Screw "B".
- To move the door away from the centre of the unit, loosen Screw "B". Adjust the door and then tighten Screw "A".


Vertical Movement

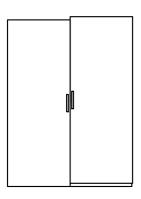


What it looks like - The door will not be flush with the vertical panel.

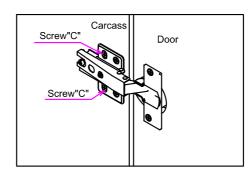

How to fix it - To move the door towards or away from the horizontal panels, loosen Screws "C". Adjust the door and then tighten Screws "C".

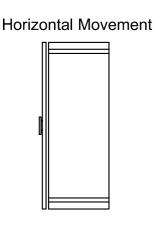

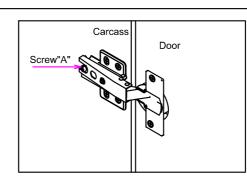

How to fix it

To move the door towards or away fron the unit, loosen Screw
"A". Adjust the door forwards or backwards until there is an even gap between the door and the front edge of the side panel.
Tighten Screw "A" once the adjustment has been made.

What it looks like - The door will appear too far or too close from the front edge of the side panel.